


HOW TO PROCESS LOMOGRAPHY ORCA B&W 100 FILM (110 FORMAT)

lomography

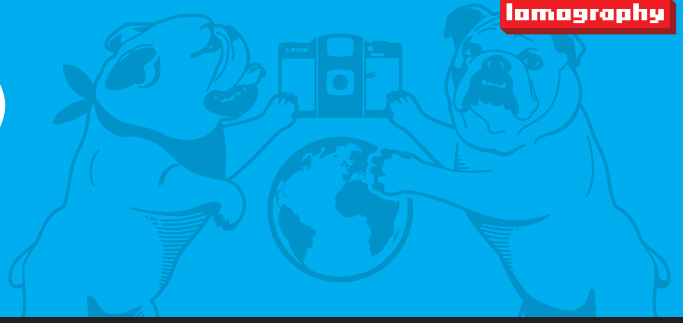

Developer	Dilution	Time	Temp	ISO
D-76	1+1	7	20°C (68°F)	100
D-96	stock	6	20°C (68°F)	100
D-96	stock	5	20°C (68°F)	100
FX-1	1+1+8	9	20°C (68°F)	100
HC-110	J(1+150)	18	20°C (68°F)	80-100
HC-110	A	7	20°C (68°F)	100
PCK	5+10+100	7	20°C (68°F)	100
PYROCAT-HD	1+1+100	10	20°C (68°F)	100
PYROCAT-HD	1+1+200	40	20°C (68°F)	100
RODINAL	1+50	9	20°C (68°F)	100
RODINAL	1+100	25	20°C (68°F)	100
X-Tol	1+1	7	20°C (68°F)	100